

C20405

for TM- and TS-series

Serial No.: 2079

Master Code: 4 7 2 1 3

English

Digi-Pad SKR4C433-1 (4-channels)

General Information

Usercodes:

The usercode is the code which enables the user to access his garage. The usercode must contain a minimum of 4 numbers and a maximum of 8 numbers. It may be freely chosen (in this instructions we are using „471“ as a simple user-code). The digi-pad can be programmed for four users, e.g. each of the users can control one door operator.

Every digi-pad comes with factory set User Codes:

- 1 1 1 1 for channel 1
- 2 2 2 2 for channel 2
- 3 3 3 3 for channel 3
- 4 4 4 4 for channel 4

The standard usercode must be changed for the channels you want to use - otherwise anyone can enter the garage using the standard usercode.

Mastercode:

The mastercode is needed for all programming functions - without this code you can neither programme new codes nor can existing codes be changed. Each Digi Pad is shipped with an individual Mastercode - changing it is not absolutely necessary. If, however, you should like to change it, please ask Seip for further information.

Usable Keys:

The keys from „0“ to „9“ may be used for codes. The keys **P** and **↔** are functional keys and cannot be part of a code.

Mounting - Recommendation



Register the digi-pad with the receiver before fitting it to a wall. This allows you to check different locations for installation and to choose the one providing the best range. A rain-protected location will enhance the digi-pads life-time.

Registering the digi-pad with a receiver:

The registration follows the same procedure as every hand-transmitter:

- 1.) Start the learning-mode on the receiver.
- 2.) Enter the user-code followed by the **↔**-button on the digi-pad. (A returned press of the **↔**-button will switch off the digi pad.)
- 3.) The receiver registers the signal from the digi-pad and stores the code in the memory. The next signal from the digi-pad will be accepted from the receiver.

You may only use one usercode for each operator! It is not possible to have two different usercodes for one single operator!

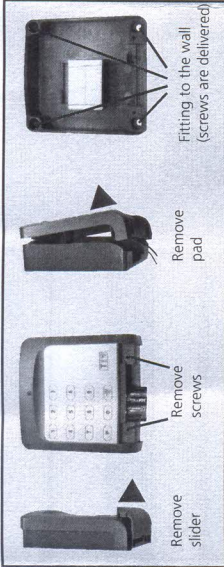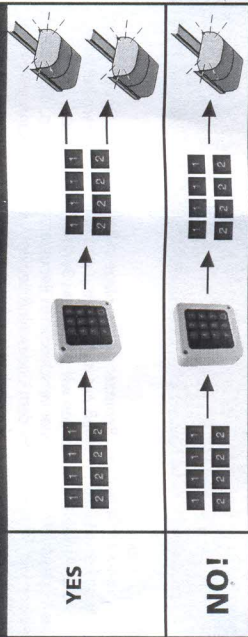

Technical Data

- Type SKR4C433-1
- No. of Codes 4 User-codes (=4 channels)
- Length of codes min. 4, max 8, numbers
- Size 83 x 86 x 29 mm
- Power Supply 2 Batteries 1.5V AAA
- Frequency 433 MHz AM
- Coding 64 bit, rolling code
- Approvals CE
- Protection Class IP54
- Temperature -15 °C to + 60°C

PROGRAMMING new USER CODES

(= Access codes for the users)

1.) Keep the „P“-button pressed for approx. 4 seconds:



the red LED is now flashing

Enter Mastercode:



 
Confirm the entry by pressing the **↔**-button; you will thereafter here a short beeping sound

Enter new Usercode

(minimum 4, maximum 8 numbers), Example:



Choose the channel:



(button 1 = 1st channel button 2 = 2nd channel etc.)

Shortly press the **↔**-button once again, in order to finish the programming mode

Four short beeps will confirm that the programming mode was finished; the LED goes off.

Please note the new User-Codes here:

User Code No. 1:
(=Channel 1)

User Code No. 2:
(=Channel 2)

User Code No. 3:
(=Channel 3)

User Code No. 4:
(=Channel 4)

USING the digi-pad
(the digi-pad must already be programmed as to the instructions on the left)

Enter the User Code, followed by the **↔**-key



The digi-pad remains active for approx. 10 sec.. During this period of time you may press any number-button to send a repeated signal.

Pressing the **↔**-button will switch off the digi-pad immediately. Once the 10 seconds have elapsed, the digi-pad will switch itself off; the user code must thereafter be re-entered in order to operate the door.

Battery Status

The red LED-light will flash shortly at each press of a button. If the LED-light should remain on for 1 Second, then the batteries are due to be exchanged (required batteries: 2 pieces of 1.5V AAA)

Changing the Batteries:

