

Changing a TS75 Fuse

IMPORTANT:- You must unplug the unit from the main supply before starting this procedure.


Health & Safety

CAUTION: This procedure is to be carried out by a competent person only.


Tools required. Long nosed pliers, a flat bladed and a Phillips type screwdriver.



1. Remove retaining screw and flip back cover.

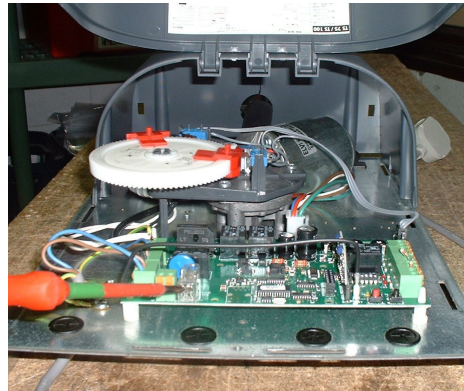

2. Locate Fuse

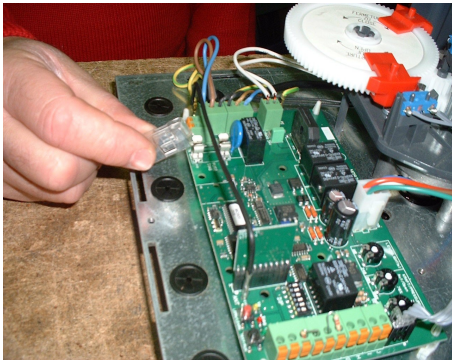

3. Remove fuse cover and replace fuse.

4. "Flip" cover back into place and replace retaining screw.