 
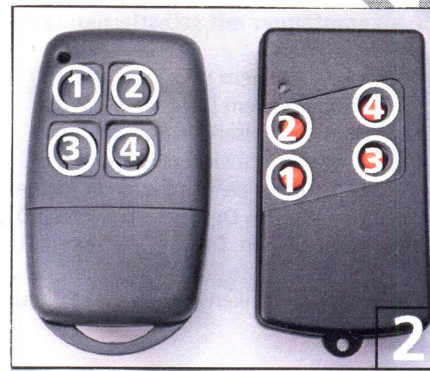 


INSTRUCTIONS TO RE-PROGRAM ANOTHER BUTTON ON THE 40MHZ MIDI REMOTE

**HEALTH & SAFETY: THESE PROCEDURES ARE TO BE
CARRIED OUT BY A COMPETENT PERSON ONLY**

Situation 1 - Receivers with DIP-switches


On receivers and operators equipped with DIP-Switches, the remote buttons 1, 2, 3 and 4 can be programmed by means of DIP-Switches number 11 and 12 on the printed circuit board inside the operator.

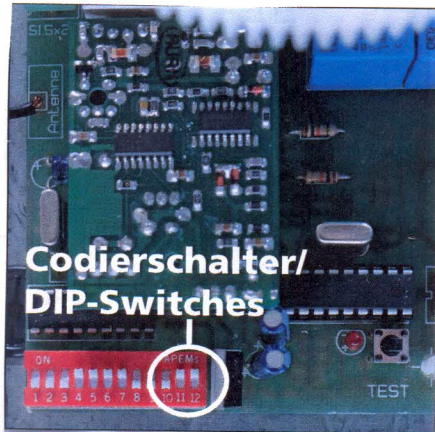

Remote Button	DIP Switch 11	DIP Switch 12
1	OFF	OFF
2	OFF	ON
3	ON	OFF
4	ON	ON

Situation 2 – Receivers with self-learning decoder

Receivers and Garage Door Operators equipped with a self-learning decoder will allow you to program any required transmitter button.

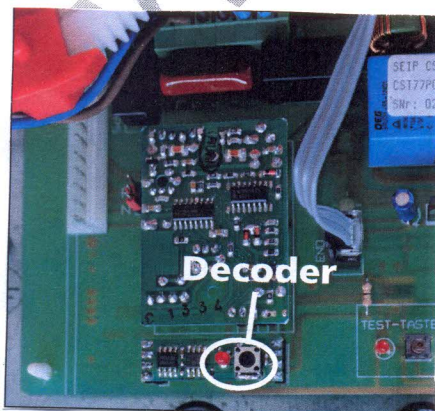

- 1) Press the little button on the decoder, the red LED-light will start blinking.
- 2) Then press the button on the remote which you would like to use.
- 3) The red LED will stop blinking, the remote button will be successfully programmed.