

# C20404

## for TM 60 and TS-series



Serial No.: 0  
Master Code: 0 0 0 0 0

English

## Digi-Pad SKR4C433 (4-channels)



### General Information

#### Usercodes:

The usercode is the code which enables the user to access his garage. The usercode must contain a minimum of 4 numbers and a maximum of 8 numbers. It may be freely chosen (in this instructions we are using „4711“ as a sample user-code). The digi-pad can be programmed for four users, e.g. each of the users can control one door operator.

Every digi-pad comes with factory set User Codes:

- 1 1 1 1 for channel 1
- 2 2 2 2 for channel 2
- 3 3 3 3 for channel 3
- 4 4 4 4 for channel 4

The standard usercode must be changed for the channels you want to use - otherwise anyone can enter the garage using the standard usercode.

#### Mastercode:

The mastercode is needed for all programming functions - without this code you can neither programme new codes nor can existing codes be changed.

Each Digi Pad is shipped with an individual Mastercode - changing it is not absolutely necessary. If, however, you should like to change it, please ask Seip for further information.

#### Usable Keys:

The keys from „0“ to „9“ may be used for codes. The keys „P“ and „Bell“ are functional keys and cannot be part of a code.

#### Mounting - Recommendation



Register the digi-pad with the receiver before fixing it to a wall. This allows you to check different locations for installation and to choose the one providing the best range. A rain-protected location will enhance the digi-pads life-time.

#### Registering the digi-pad with a receiver:

The registration follows the same procedure as every hand-transmitter:

- 1.) Start the learning-mode on the receiver
- 2.) Activate the digi-pad by pressing any button
- 3.) Enter the user-code followed by the „P“ key on the digi-pad. (A returned press of the „P“ key will switch off the digi pad.)
- 4.) The receiver registers the signal from the digi-pad and stores the code in the memory. The next signal from the digi-pad will be accepted from the receiver.

**You may only use one usercode for each operator! It is not possible to have two different usercodes for one single operator!**

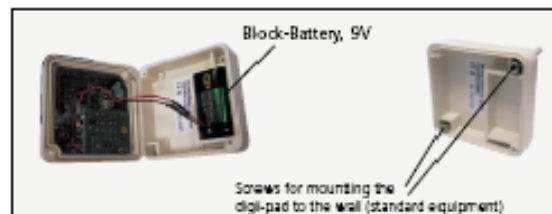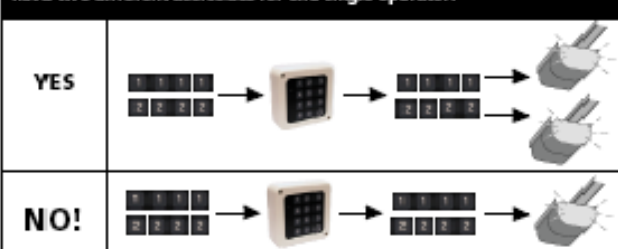

#### Technical Data

No. of Codes	4 User-codes (=4 channels)
Length of codes	min. 4, max 8, numbers
Size	80 x 80 x 30 mm
Voltage	1* 9V back-battery
Frequency	433 MHz AM
Coding	64 bit, rolling code
Approvals	CE

### PROGRAMMING new USER CODES (= Access codes for the users)

- 1.) Press any button to activate the digi-pad:  
  
the green LED flashes shortly
- 2.) Start programming mode by pressing the „P“-button  
  
the green LED starts blinking
- 3.) Enter Mastercode:  
  
the mastercode is confirmed by pressing the „Bell“-button
- 4.) Enter new Usercode (minimum 4, maximum 8 numbers), Example:  
  
the green LED turns off and the new usercode is programmed
- 5.) Choose the channel:  
  
(Button 1 = 1st channel, button 2 = 2nd channel, etc.)  
the green LED turns off and the new usercode is programmed

### USING the digi-pad (the digi-pad must already be programmed as to the instructions on the left)

- Press any button to activate the digi-pad:
- Enter the usercode and confirm it by pressing the „Bell“-button:  
Example:
- The digi-pad remains active for approx. 15 sec.. During this period of time you may press any number-button to send a repeated signal. Pressing the „Bell“-button will switch off the digi-pad. Once the 15 seconds have elapsed, the digi-pad will switch itself off.

#### Important Notes for the Users!

The digi-pad returns to a energy-saving mode when not used. Therefore it must first be „switched on“ before use.

If a user code is entered instantly, then the first digit is not recognized by the digi-pad.

You **MUST** shortly press any button on the digi-pad to switch it on before entering your usercode. Alternatively you may keep the first button of your usercode pressed for approx. 1 second. Once the digi-pad is switched on, it will remain active for 15 seconds.

Each press of a button will be confirmed by a short flash of the green LED-light.

When the LED starts blinking after a usercode was entered, then the code is incorrect. The LED stops blinking after a couple of seconds. Be for entering the code again you **MUST** wait until the LED stops blinking! When the code was entered incorrectly for 5 times then the digi-pad remains disabled for 20 seconds.

#### Low running battery

When the green LED glows for 5 seconds after the digi-pad was switched on, then the battery is running low and should be exchanged, soon. Whilst the LED is glowing you cannot enter a code - you must wait until the LED is off.

Please check the battery first when the digi-pad does not react to inputs!

#### Please note the new User-Codes here:

User Cod No.1: (=Channel 1)
User Code No.2: (=Channel 2)
User Code No.3: (=Channel 3)
User Code No.4: (=Channel 4)